



W5747 Lost Arrow Road • Fond du Lac, WI 54937 • Ph(920)922-9168 • F(920)922-1429
www.tecre.com

Model 350 Button Maker Machine: How to Make a Coaster Button with the Coaster Insert




1. Before you begin assembly of your coaster button you must first place the coaster insert into the bottom side of upper die (flat side down). The insert will snap into place and it is magnetic so it will stay on its own.



****Important: If the coaster insert is not installed correctly, damage will occur!****

**Coaster
Insert**
(This side up)

2. Assemble the button as you normally would. Instead of using a pinned back you will use the flat back in the second die (sharp side up).

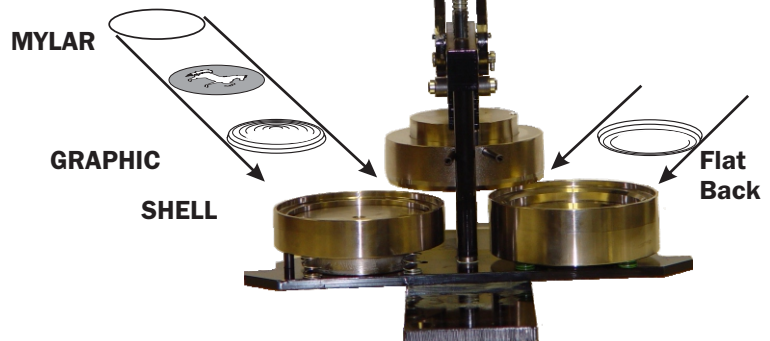

To remove the coaster insert, place the rod that came with the insert into the hole on top of the upper die. Press down and the insert will drop out of the upper die of the button maker.

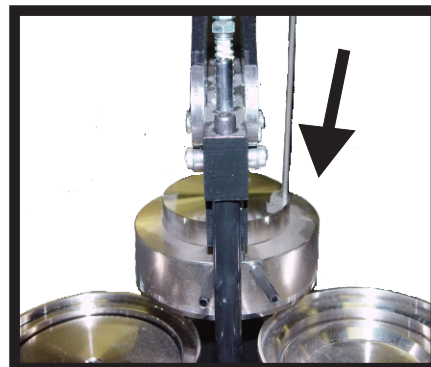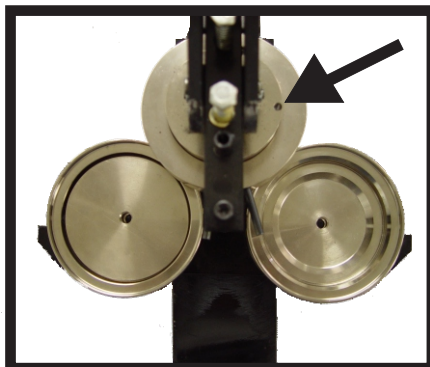

Visit Tecom's YouTube Channel for full instructional video

