




W5747 Lost Arrow Road • Fond du Lac, WI 54937 • Ph(920)922-9168 • F(920)922-1429
www.tecre.com

How to Make a Rectangle, Rounded Corner, Square, Oval, or Octagon Pinned Back Button

1. Identify the crimp die and the pickup die of the button maker machine.
2. Rotate the die table so that the crimp die is positioned under the upper die.
3. Insert a shell into the pickup die. Place the graphic on the shell. Place the mylar on top of the graphic.
4. Rotate the die table one-half turn clockwise until the die table stop is against the outer column.
5. Pull the handle down as far as it will go and raise it back up to its rest position.
6. Place a pinned back into the crimp die with the pin opening facing down. Line up the top of the pinned back the same direction you placed the top of the graphic for correct orientation.
7. Rotate the die table one-half turn counterclockwise until the die table stop is against the outer column.
8. Pull the handle down as far as it will go and raise it back up to its rest position.
9. Rotate the die table clockwise again to remove the finished button.

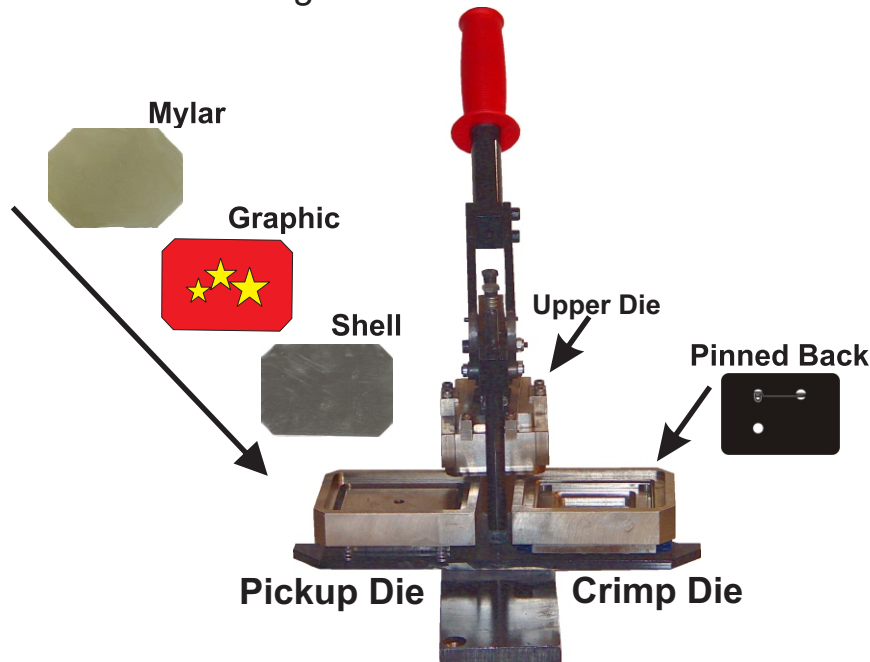

Manual Button Maker Machine

Rectangle Models 1727, 2030, 2535, 1545 Rounded Corner Models 1727RC, 2030RC

Square Models 1515, 2020, 2525, 3030 Oval Models 1017, 1727

Octagon Model Octagon2020

For additional instructions of the different accessories your button maker is capable of producing please visit the "Button Maker Resources" page at www.tecre.com

Care instructions for your button maker as well as information regarding paper and graphic material can be found at <http://tecre.com/blog>

